

SCC (Slow Control Center)

The SCC can run only on this machine.

If you need to start the SCC from scratch you need to:

login: fnddafne
(open a terminal)

```
> source fnd.sh  
> SlowControlCenter
```

(A GraphicUserInterface will start)

Just press the “*START ALL*” button.

What users need to know...:

- The last received error messages is stored (status-bar message)
- “PRINT INFO” buttons are very useful:
(The status of every channel is printed on the shell)

What users can do...:

- Users can start/stop the monitoring of every slow control.
- Users can QUIT the SCC by using the “*QUIT*”
- Users can get the whole information from any slow control simply by using “PRINT INFO” buttons

What users should do...:

- If a Warning (yellow) or Error (red) message appears, users shall check directly the detector SlowControl machine.
- While checking information on the TOFINO/TOFONE Slow Control machine: the information provided by the TOF Global-Monitoris not enough: users shall close the Global-Monitor and use the TOFINO/TOFONE dedicated monitor.

Please send any comment to: faso@to.infn.it